




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	DTV/ATV		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Aspect		Zoom / Size

**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu / Home
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	V+		Vol+
	V-		Vol-
	Mute		Mute / Dimmer
	MTS		Eject / Surround
	Timer		Sleep / Timer
	P+		CH+ / Page+
	P-		CH- / Page-
	Red		Red / Netflix / Search



