



 



 





 

 


 





 



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source (Games)		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	World/Internet		Smart / List
	PR-		CH- / Page-
	Menu		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Movie-Music-Phot		Display / Media
	Guide		Guide / EPG / -/-
	*/o		Picture / Format
	*/o..		Setup / OPT /





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	[≡]/Text		Text / Goto				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Lang		Audio / Lang I/II				
	[≡]..		Subtitle / EQ				
	[-o-]		Zoom / Size				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

