 










 





















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AUX		Shift + 7
	USB		Shift + 8
	Card		Shift + 4
	DVD		Shift + 2
	Tuner		Shift + 6
	Tape		Shift + 5

















Originalfernbedienung Ersatzfernbedienung

	OSD/Info		Info / Angle
	Prog		TV/Radio /
	Setup		Setup / OPT /
	Menu		Menu / Home
	Audio		Audio / Lang I/II
	Title		Shift + Sound / Title
	Subtitle		Subtitle / EQ
	Timer		Shift + Sleep / Timer
	+10		Guide / EPG / -/-
	Sleep		Sleep / Timer
	Play		Play / Slow
	Clock		Back / Return
	Pause		Pause / Step / Freeze
	Enter		OK
	Up/Preset+		Up
	Down/Preset-		Down
	>>/Tun+		>> / Tune+

















**Originalfernbedienung Ersatzfernbedienung**

	<</Tun-		<< / Tune-
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Repeat		Green / APP / Repeat
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Vol-		Vol-
	Vol+		Vol+
	Mute		Mute / Dimmer
	Demo		Picture / Format
	EQ		Shift + Subtitle / EQ
	Bass		Shift + Audio / Lang I/II
	St/Mono		Sound / Title
	Bookmark		Display / Media
	Intro		D.Menu / Top
	Rand		Blue / Prime Video / Random

**Originalfernbedienung Ersatzfernbedienung**

	RDS/A-B		AV / Input / RDS
	Zoom		Zoom / Size
	P.Scan		Eject / Surround
	Angle		Shift + Info / Angle
	Step		Shift + Pause / Step /
	Slow		Shift + Play /

