

 
 


 
 

 

 

 



 

 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+	 + 	Shift + Guide
	Mute		Mute
	Title/TTX		Text
	Menu		Menu
	Favorite		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	Info		Info
	Vol-		Vol -
	Vol+		Vol +
	Play		Play
	Pause		Pause
	Stop		Stop
	Goto		Smart
	Setup		Options
	Return		Back
	Source		AV
	Enter		Ok
	Up		Up
	CH+		Ch +
	CH-		Ch -
	Down		Down
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Red/Repeat		Red
	Green/A-B		Green
	Yellow/Angle		Yellow
	Blue/Slow		Blue
	Program		Sleep
	Language		Dual
	Zoom	+	Shift + Eject
	Subtitle		Subt
	PBC		3D
	L/R		Media
	P/N		Exit
	Video	+	Shift + AV

Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/R

