

 

 

 

 

 



 



 





 







 





**Originalfernbedienung Ersatzfernbedienung**

	Open/Close		Eject / Surround
	Standby		Power
	Source		AV / Input / RDS
	Function		D.Menu / Top
	TFT On/Off		Exit / Cancel / Clear
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Shift + Guide / EPG / -/-











 

 
 








 







 

**Originalfernbedienung Ersatzfernbedienung**

	Setup		Setup / OPT /
	Return		Back / Return
	Up		Up
	Pre/Tun		Fav / Marker / PC
	Left		Left
	Enter		OK
	Right		Right
	Memo		Sleep / Timer
	Down		Down
	Auto		Rec / Rec Mode
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Vol-		Vol-
	Vol+		Vol+
	CH-		CH- / Page-
	CH+		CH+ / Page+

 




Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Zoom		Zoom / Size
	Prog		Shift + TV/Radio / Program
	Slow		Shift + Play /
	A-B		Yellow / YouTube / Repeat
	Goto		Text / Goto
	Title		Sound / Title
	Menu		Menu / Home
	Display		Display / Media
	Subtitle		Subtitle / EQ
	N/P		Red / Netflix / Search
	Language		Audio / Lang I/II
	Angle		Info / Angle
	Resume		Smart / List

Originalfernbedienung Ersatzfernbedienung

	Repeat		Green / APP / Repeat
	R/L		Blue / Prime Video / Random
	4:3/16:9		Picture / Format
	EPG		Guide / EPG / -/--
	Tv/Radio		TV/Radio /
	Video		Shift + 4
	EQ		Shift + Subtitle / EQ

