



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Open/Close		Eject / Surround
	DVD		Shift + 2
	Browser		Smart / List
	Tv Sys		TV/Radio /
	Rec		Rec / Rec Mode
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Repeat		Shift + Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

	0		0
	Info		Info / Angle
	>>		>> / Tune+
	Vol-		Vol-
	Vol+		Vol+
	>>		>>  / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-
	Home		Shift + Menu /
	Up		Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right



