

























 



 



 








 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Shuffle		Blue / Prime Video / Random
	[/]		>>  / Preset+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Down		Down
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	OK		OK
	Esc		Exit / Cancel / Clear
	Snap Shot		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Pause/Step		Pause / Step / Freeze
	Record		Rec / Rec Mode
	Stop		Stop / Hold

