







 














 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Display / Media
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Music		Red / Netflix / Search
	Copy		Info / Angle
	Zoom		Zoom / Size
	Tv System		TV/Radio /
	Browser		D.Menu / Top
	Vol-		Vol-
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Sound / Title
	0		0
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Timer		Sleep / Timer
	Pause/Step		Pause / Step / Freeze
	I>/Slow		Fav / Marker / PC
	I<</Prev		I<< / Preset-
	ReclList		Smart / List
	←/INS Replay		CH- / Page-
	→/CM Skip		CH+ / Page+
	>>I/Next		>>I / Preset+
	A-B		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	Repeat		Green / APP / Repeat
	<</FR		<< / Tune-
	F1		Blue / Prime Video / Random
	Source		AV / Input / RDS
	Audio		Audio / Lang I/II
	>>/FF		>> / Tune+

Originalfernbedienung	Ersatzfernbedienung

