



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Red / F1		Red / Netflix / Search
	Green / F2		Green / APP / Repeat
	Yellow / F3		Yellow / YouTube / Repeat
	Blue / F4		Blue / Prime Video / Random
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>		>> / Tune+
	V.Format		Picture / Format
	Resolution		Zoom / Size
	Subtitle		Subtitle / EQ
	Rec		Rec / Rec Mode
	Option		Setup / OPT /
	Audio		Audio / Lang I/II



 

 






 

 



 





**Originalfernbedienung    Ersatzfernbedienung**

	Text		Text / Goto
	SAT		Shift + 0
	Info		Info / Angle
	Recall		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	FAV		Fav / Marker / PC
	Page +		CH+ / Page+
	Vol -		Vol-
	EPG		Guide / EPG / -/-
	Page -		CH- / Page-





Originalfernbedienung    Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Sleep		Sleep / Timer
	0		0
	TV / Radio		TV/Radio /

Originalfernbedienung    Ersatzfernbedienung






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red / F1		Red / Netflix / Search
	Green / F2		Green / APP / Repeat
	Yellow / F3		Yellow / YouTube / Repeat
	Blue / F4		Blue / Prime Video / Random
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>		>> / Tune+
	V-Format		Picture / Format
	Resolution		Zoom / Size
	Subtitle		Subtitle / EQ
	Rec		Rec / Rec Mode
	Option		Setup / OPT /
	Audio		Audio / Lang I/II


 

 

 

 

 

 

 

 

 



Originalfernbedienung Ersatzfernbedienung

	Text		Text / Goto
	SAT		Shift + 0
	Info		Info / Angle
	Recall		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	FAV		Fav / Marker / PC
	Page+		CH+ / Page+
	Vol-		Vol-
	EPG		Guide / EPG / -/-
	Page-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Sleep		Sleep / Timer
	0		0
	TV / Radio		TV/Radio /

Originalfernbedienung Ersatzfernbedienung