



Originalfernbedienung Ersatzfernbedienung

|   |            |   |         |
|---|------------|---|---------|
|    | Power      |    | Power   |
|    | Mute       |    | Mute    |
|    | Red/F1     |    | Red     |
|    | Green/F2   |    | Green   |
|    | Yellow/F3  |    | Yellow  |
|    | Blue/IPTV  |    | Blue    |
|    | <<         |    | <<      |
|    | Play       |    | Play    |
|    | Pause      |    | Pause   |
|   | Stop       |   | Stop    |
|  | >>         |  | >>      |
|  | V.Format   |  | Format  |
|  | Resolution |  | 3D      |
|  | Subtitle   |  | Subt    |
|  | Rec        |  | Rec     |
|  | Option     |  | Options |
|  | Audio      |  | Dual    |

Originalfernbedienung Ersatzfernbedienung

|   |        |   |        |
|---|--------|---|--------|
|    | Text   |    | Text   |
|    | SAT    |    | Smart  |
|    | Info   |    | Info   |
|    | Recall |    | Back   |
|    | Menu   |    | Menu   |
|    | Exit   |    | Exit   |
|    | Up     |    | Up     |
|    | Down   |    | Down   |
|    | Right  |    | Right  |
|   | Left   |   | Left   |
|  | OK     |  | Ok     |
|  | Vol+   |  | Vol +  |
|  | Vol-   |  | Vol -  |
|  | FAV    |  | Pre Ch |
|  | EPG    |  | Guide  |
|  | Page+  |  | Ch +   |
|  | Page-  |  | Ch -   |





Originalfernbedienung Ersatzfernbedienung

|          |          |             |       |
|----------|----------|-------------|-------|
| 1        | 1        | 1           | 1     |
| 2        | 2        | 2           | 2     |
| 3        | 3        | 3           | 3     |
| 4        | 4        | 4           | 4     |
| 5        | 5        | 5           | 5     |
| 6        | 6        | 6           | 6     |
| 7        | 7        | 7           | 7     |
| 8        | 8        | 8           | 8     |
| 9        | 9        | 9           | 9     |
| 0        | 0        | 0           | 0     |
| SLEEP    | Sleep    | PROG SLEEP  | Sleep |
| TV/RADIO | Tv/Radio | SEARCH TV/R | TV/R  |
|          |          |             |       |
|          |          |             |       |
|          |          |             |       |
|          |          |             |       |
|          |          |             |       |
|          |          |             |       |
|          |          |             |       |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

