 

 

 
 
 

 
 






 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	iPod		Shift + 1
	Tv		Shift + 2
	AUX		Shift + 3
	Play		Play
	Pause		Pause
	Stop		Stop
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Tuner		Shift + 4
	Disc/USB/NET		Shift + 5
	Red/Program		Red
	Green/Marker		Green
	Yelow/Digest		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue/Zoom		Blue
	Sleep		Sleep
	Timer		AV
	Surround		Dual
	Mute		Mute
	Clear		Exit
	Search		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



