

 
 
 

 
 
 
 
 

 

 
 
 
 
 
 







 






 


 
 

 

 


 
 
 
 
 
 
 
 

 
 
 
 
 
 
 

 
 
 







Originalfernbedienung Ersatzfernbedienung


	Power		Power
	Sleep		Sleep
	1 HDMI		1
	2 HDMI		2
	3 HDMI		3
	4 HDMI		4
	1 AV		5
	2 AV		6
	3 AV		7
	4 AV		8
	5 AV		9
	1 Audio		Guide
	2 Audio		0
	V-AUX		AV
	Tuner		Pre Ch
	FM Tuner		Smart
	AM Tuner		Media

Originalfernbedienung Ersatzfernbedienung

	Memory		D. Menu
	Preset Tuner Up		Shift + Up
	Preset Tuner		Shift + Down
	Tuning Up		Ch +
	Tuning Down		Ch -
	Info		Info
	Movie		I<<
	Surr.Decode		>>I
	Music		<<
	Straight		Play
	Stereo/Enhance		>>
	BD/DVD		Red
	TV		Green
	CD		Yellow
	Radio		Blue
	Return		Back
	Setup		Menu





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Option		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

