 

 














 







 



 



 



 

 



 

 

 





Originalfernbedienung Ersatzfernbedienung

	Standby		Shift + Power
	Power		Power
	Scene 1		Red / Netflix / Search
	Scene 2		Green / APP / Repeat
	Scene 3		Yellow / YouTube / Repeat
	Scene 4		Blue / Prime Video / Random
	CD		3
	MD/CD-R		4
	Tuner		6
	Multi CH In		8
	DVD		2
	DTV/CBL		1
	DVR		5
	V-AUX		7
	Vol-		Vol-
	Mute		Mute / Dimmer
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	A/B/C/D/E		AV / Input / RDS
	< Preset		I<< / Preset-
	Preset >		>>I / Preset+
	Sleep		Sleep / Timer
	Level		Smart / List
	Up		Up
	Menu		Menu / Home
	Audio Sel		Audio / Lang I/II
	Left		Left
	Enter		OK
	Right		Right
	Night		Exit / Cancel / Clear
	Return		Back / Return
	Down		Down
	Display		Display / Media
	Sur. Decode		Sound / Title
	Straight		Text / Goto



