



 

































 



 





 









Originalfernbedienung Ersatzfernbedienung

| | |
|----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Standby / On |  Power |
|  Tape Rec / Pause |  Shift + Rec / Rec Mode |
|  Tape Deck A/B |  Display / Media |
|  Tape << |  Shift + << / |
|  Tape Play |  Shift + Play / |
|  Tape >> |  Shift + >> / |
|  Tape DIR A |  Red / Netflix / Search |
|  Tape Stop |  Shift + Stop / |
|  Tape DIR B |  Green / APP / Repeat |
|  CD Disc Skip |  Smart / List |
|  CD I<< |  I<< / Preset- |
|  CD Play |  Play / Slow |
|  CD >>I |  >>I / Preset+ |
|  CD << |  << / Tune- |
|  CD Pause/Stop |  Pause / Step / Freeze |
|  CD Pause/Stop |  Stop / Hold |
|  CD >> |  >> / Tune+ |

Originalfernbedienung Ersatzfernbedienung

| | |
|-----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
|  Tuner Preset - |  CH- / Page- |
|  Tuner Preset + |  CH+ / Page+ |
|  Tuner A/B/C/D/E |  Info / Angle |
|  MD |  2 |
|  Tape |  5 |
|  CD / DVD |  3 |
|  AUX |  7 |
|  Phono |  4 |
|  Tuner |  6 |
|  Volume - |  Vol- |
|  Volume + |  Vol+ |

