



**Originalfernbedienung Ersatzfernbedienung**

|   |                |   |                  |
|---|----------------|---|------------------|
|    | Standby / On   |    | Power            |
|    | STB            |    | Shift + 3        |
|    | DVD            |    | Shift + 2        |
|    | AUX            |    | Shift + 7        |
|    | TV             |    | Shift + 1        |
|    | Vol Mode       |    | Smart / List     |
|    | Auto Setup     |    | Setup / OPT /    |
|    | Input Mode     |    | AV / Input / RDS |
|    | Sleep          |    | Sleep / Timer    |
|    | 1 / 5BEAM      |    | 1                |
|  | 2 / ST + 3BEAM |  | 2                |
|  | 3 / 3BEAM      |  | 3                |
|  | 4 / Stereo     |  | 4                |
|  | 5 / My Beam    |  | 5                |
|  | 6 / Surround   |  | Eject / Surround |
|  | 6 / Surround   |  | 6                |
|  | 7 / Music      |  | 7                |

**Originalfernbedienung Ersatzfernbedienung**

|   |            |   |                    |
|---|------------|---|--------------------|
|    | 8 / Movie  |    | 8                  |
|    | 9 / Sports |    | 9                  |
|    | 0 / Off    |    | 0                  |
|    | +10        |    | Guide / EPG / -/-- |
|    | CH Level   |    | Audio / Lang I/II  |
|    | CH Level   |    | Display / Media    |
|    | Up         |    | Up                 |
|    | Menu       |    | Menu / Home        |
|    | Left       |    | Left               |
|    | Enter      |    | OK                 |
|  | Right      |  | Right              |
|  | Test       |  | Text / Goto        |
|  | Down       |  | Down               |
|  | Return     |  | Back / Return      |
|  | Volume +   |  | Vol+               |
|  | Volume -   |  | Vol-               |
|  | Mute       |  | Mute / Dimmer      |





Originalfernbedienung Ersatzfernbedienung

|   |         |   |                 |
|---|---------|---|-----------------|
|    | Power   |    | Power           |
|    | Input 1 |    | Smart / List    |
|    | Input 2 |    | Display / Media |
|    | 1       |    | 1               |
|    | 2       |    | 2               |
|    | 3       |    | 3               |
|    | 4       |    | 4               |
|    | 5       |    | 5               |
|    | 6       |    | 6               |
|    | 7       |    | 7               |
|   | 8       |   | 8               |
|  | 9       |  | 9               |
|  | 0       |  | 0               |
|  | CH+     |  | CH+ / Page+     |
|  | Tv Vol+ |  | Vol+            |
|  | CH-     |  | CH- / Page-     |
|  | Tv Vol- |  | Vol-            |

Originalfernbedienung Ersatzfernbedienung

|   |           |   |                  |
|---|-----------|---|------------------|
|    | Tv Input  |    | AV / Input / RDS |
|    | Tv Mute   |    | Mute / Dimmer    |
|    | Power AUX |    | Shift + Power    |
|    | 1 AUX     |    | Shift + 1        |
|    | 2 AUX     |    | Shift + 2        |
|    | 3 AUX     |    | Shift + 3        |
|    | 4 AUX     |    | Shift + 4        |
|    | 5 AUX     |    | Shift + 5        |
|    | 6 AUX     |    | Shift + 6        |
|    | 7 AUX     |    | Shift + 7        |
|   | 8 AUX     |   | Shift + 8        |
|  | 9 AUX     |  | Shift + 9        |
|  | 0 AUX     |  | Shift + 0        |















**Originalfernbedienung Ersatzfernbedienung**

|   |        |   |                    |
|---|--------|---|--------------------|
|    | Power  |    | Power              |
|    | 1      |    | 1                  |
|    | 2      |    | 2                  |
|    | 3      |    | 3                  |
|    | 4      |    | 4                  |
|    | 5      |    | 5                  |
|    | 6      |    | 6                  |
|    | 7      |    | 7                  |
|    | 8      |    | 8                  |
|    | 9      |    | 9                  |
|   | 0      |   | 0                  |
|  | +10    |  | Guide / EPG / -/-- |
|  | Menu   |  | Menu / Home        |
|  | Return |  | Back / Return      |
|  | <<     |  | << / Tune-         |
|  | Stop   |  | Stop / Hold        |
|  | >>     |  | >> / Tune+         |

**Originalfernbedienung Ersatzfernbedienung**

|   |       |   |                       |
|---|-------|---|-----------------------|
|  | I<<   |  | I<< / Preset-         |
|  | Pause |  | Pause / Step / Freeze |
|  | >>I   |  | >>I / Preset+         |
|  | Play  |  | Play / Slow           |





Originalfernbedienung Ersatzfernbedienung

|  |       |   |                       |
|--|-------|---|-----------------------|
| STANDBY/ON  | Power |                  | Power                 |
| 5BEAM       | 1     | TV               | 1                     |
| ST+3BEAM    | 2     | DVD              | 2                     |
| 3BEAM       | 3     | CD - STB         | 3                     |
| STEREO      | 4     | VIDEO            | 4                     |
| MY BEAM     | 5     | TAPE             | 5                     |
| SURROUND    | 6     | TUNER            | 6                     |
| MUSIC       | 7     | AUX - HDD        | 7                     |
| MOVIE       | 8     | USB              | 8                     |
| SPORTS      | 9     | BLUETOOTH        | 9                     |
| OFF       | 0     | HDMI - BAT     | 0                     |
|           | <<    | TUNE-          | << / Tune-            |
|           | Stop  | HOLD           | Stop / Hold           |
|           | >>    | TUNE+          | >> / Tune+            |
|           | Pause | STEP - FREEZE  | Pause / Step / Freeze |
|           | Play  | SLOW           | Play / Slow           |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

