
 



 
 
 
 


 



 


 
 

 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	iPod		1
	CD		2
	USB		3
	FM		4
	Phono		5
	AUX		6
	Preset Up		Ch +
	Preset Down		Ch -
	Tuning Up		>>
	Tuning Down		<<
	Memory		Rec
	Repeat		Text
	Stop		Stop
	Random		Media
	iPod Menu Sel Up		Up
	iPod Menu Sel Down		Down

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Play		Play
	Pause		Pause
	>>		>>
	<<		<<
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Tone/Balance		Right
	Tone/Balance		Left
	Tone/Balance		Smart
	Display		Info
	Dimmer		Subt
	Sleep		Sleep
	Pure Direct		Options



Down