 
 
 

 
 
 

 

 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|--|--------------|
|  | AUX |  | 1 |
|  | AUX 2 |  | 7 |
|  | AUX 3 |  | 8 |
|  | TAPE 2 |  | 2 |
|  | TAPE 1 |  | 3 |
|  | TUNER |  | 4 |
|  | CD |  | 5 |
|  | PHONO |  | 6 |
|  | Tape DIR. A |  | Left |
|  | Tape DIR. B |  | Right |
|  | Tape |  | Shift + Rec |
|  | Tape PLAY |  | Shift + Play |
|  | Tape << |  | Shift + << |
|  | Tape >> |  | Shift + >> |
|  | Tape STOP |  | Shift + Stop |
|  | Tape A/B |  | Ok |
|  | Tuner PRESET - |  | Ch - |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|-------|
|  | Tuner PRESET + |  | Ch + |
|  | Tuner A/B/C/D/E |  | Smart |
|  | CD << |  | << |
|  | CD >> |  | >> |
|  | CD Disc |  | List |
|  | CD PLAY |  | Play |
|  | CD I<< |  | I<< |
|  | CD >>I |  | >>I |
|  | CD PAUSE/STOP |  | Stop |
|  | CD PAUSE/STOP |  | Pause |
|  | Phono Play/Cut |  | Media |
|  | POWER |  | Power |
|  | Volume- |  | Vol - |
|  | Volume+ |  | Vol + |

