







 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby		Shift + Power
	Input CD		1
	Input TUNER		2
	Input TAPE/MD		3
	Input DVD/LD		4
	Input TV/DBS		5
	Input VCR		6
	Input PHONO		7
	Input V-AUX		8
	Ext. Dec.		0
	A/B/C/D/E		Smart
	Test		Text
	Preset-		Ch -
	Preset+		Ch +
	Volume-		Vol -
	Mute		Mute






 
Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol +
	Sleep		Sleep
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Level		AV
	Set Menu		Menu
	EFCT. On/Off		Pre Ch
	EFCT. On/Off		Shift + Pre Ch
	Dolby Digital/Pro Logic		Shift + 1
	Enhanced		Shift + 2
	Movie Theater		Shift + 3
	Mono Movie		Shift + 4
	TV Sports		Shift + 5
	Disco		Shift + 6





Originalfernbedienung Ersatzfernbedienung

	Rock	 + 	Shift + 7
	Hall	 + 	Shift + 8

Originalfernbedienung Ersatzfernbedienung

