



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	PHONO		1
	SLEEP		Sleep
	CD		2
	TUNER		3
	PRESET +		Eject
	PRESET -		Shift + Options
	LD/TV		4
	TAPE MON		5
	VCR MON		6
	VOLUME +		Vol +
	VOLUME -		Vol -
	CENTER MODE		Dual
	DELAY TIME +		Ch +
	DELAY TIME -		Ch -
	ROCK		Green
	HALL		Red

Originalfernbedienung Ersatzfernbedienung

	DOLBY 3		Blue
	A/B/C/D/E		Options
	DOLBY		Yellow
	EFFECT ON/OFF		Text

