 


 

 
 

 




 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	Red/Program		Red
	Green/Marker		Green
	Yellow/Digest		Yellow
	Blue/Zoom		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit

Originalfernbedienung Ersatzfernbedienung

	Search		TV/R
	PIP		Vol +
	2nd Audio		Vol -
	Setup		Options
	Home		Smart
	Repeat		Ch +
	A/B		Ch -
	Top Menu		Menu
	Pop-Up/Menu		AV
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Return		Back
	On Screen		Info
	Status		Text





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Subtitle		Subt
	Angle		Format
	Audio		Dual
	<</<<		<<
	>> />>		>>
	<<		<<
	>>		>>
	SA-CD/CD		Media
	Stop		Stop
	Pause		Pause
	Play		Play
	Pure Direct		List
	Dimmer		Mute
	< / <	+	Shift + <<
	> / >	+	Shift + >>

