



Originalfernbedienung	Ersatzfernbedienung
Phono	1
Play/Cut Phono	7
AUX	6
CD	2
Play CD	Play
I<< Skip CD	I<<
>>I Skip CD	>>I
<< Search CD	<<
>> Search CD	>>
Pause/Stop CD	Pause
Pause/Stop CD	Stop
Disc Skip CD	List
Tuner	3
A/B/C/D/E Tuner	Smart
Preset - Tuner	Ch -
Preset + Tuner	Ch +
EQ On/Flat	Menu

Originalfernbedienung	Ersatzfernbedienung
EQ Preset+	D. Menu
Tape 1	4
Tape 2	5
Play Tape	Ok
Dir A Tape	Red
Dir B Tape	Green
<< Tape	Left
>> Tape	Right
Stop Tape	Down
Deck A/B Tape	Yellow
Rec/Pause Tape	Up
Rec Mute Tape	Mute
Vol-	Vol -
Vol+	Vol +

