


 

 
 












 


 

 
 
 
 




 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Dimmer		List
	Speakers A		Red
	Speakers B		Green
	Coaxial		1
	Optical		2
	Net		3
	Line 1		4
	Line 2		5
	Line 3		6
	Mode		Format
	Tuner		7
	CD		8
	FM		TV/R
	<< Tuning		<<
	Tuning >>		>>

Originalfernbedienung Ersatzfernbedienung

	AM		Media
	< Preset		Ch -
	Preset >		Ch +
	Pop-Up Menu		Menu
	Home		Smart
	NDW Playing		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Setup		D. Menu
	Return		Back
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Play		Play
	I<<		I<<
	Option		Options
	>>I		>>I
	Display		Info
	Repeat		Text
	Shuffle		AV

Originalfernbedienung Ersatzfernbedienung

