 


 

 


 



 

 
 



 








 

 



 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby	 + 	Shift + Power
	Tuner		1
	CD		2
	CD-R		3
	DTV		4
	CBL/SAT		5
	MD/Tape		6
	Net/USB		7
	VCR 1		8
	DVR/VCR 2		9
	DVD		Guide
	V-AUX/Dock		0
	Preset Up		Ch +
	Preset Down		Ch -
	A/B/C/D/E		Smart
	Vol+		Vol +

 


 
 
 








 
 
 

 
 














Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby		Shift + Power
	Tuner		1
	CD		2
	CD-R		3
	DTV		4
	CBL/SAT		5
	MD/Tape		6
	Net/USB		7
	VCR 1		8
	DVR/VCR 2		9
	DVD		Guide
	V-AUX/Dock		0
	Preset Up		Ch +
	Preset Down		Ch -
	A/B/C/D/E		Smart
	Vol+		Vol +

 




 



 




 


 
 
 


 





 

 



Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute


 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby	 + 	Shift + Power
	Tuner		1
	CD		2
	CD-R		3
	DTV		4
	CBL/SAT		5
	MD/Tape		6
	Net/USB		7
	VCR 1		8
	DVR/VCR 2		9
	DVD	 GUIDE	Guide
	V-AUX/Dock		0
	Preset Up	 CH	Ch +
	Preset Down	 -	Ch -
	A/B/C/D/E	 SMART	Smart
	Vol+	 VOL	Vol +



 




 



 

 
 

 

 


 





 

 



 
Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby		Shift + Power
	Tuner		1
	CD		2
	CD-R		3
	DTV		4
	CBL/SAT		5
	MD/Tape		6
	Net/USB		7
	VCR 1		8
	DVR/VCR 2		9
	DVD		Guide
	V-AUX/Dock		0
	Preset Up		Ch +
	Preset Down		Ch -
	A/B/C/D/E		Smart
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute

