 
 


 
 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|--|---------------|
|  | Power |  | Power |
|  | Clock |  | D. Menu |
|  | Timer |  | AV |
|  | Open/Close |  | Eject |
|  | Menu |  | Menu |
|  | Enter iPod |  | Ok |
|  | Play iPod |  | Shift + Play |
|  | >>I iPod |  | Shift + >>I |
|  | Pause iPod |  | Shift + Pause |
|  | ↑ iPod |  | Up |
|  | ↓ iPod |  | Down |
|  | I<< iPod |  | Shift + I<< |
|  | Repeat iPod |  | Shift + Text |
|  | Shuffle iPod |  | Shift + Subt |
|  | iPod |  | Green |
|  | CD |  | Yellow |
|  | USB |  | Blue |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------------|
|  | AUX |  | Red |
|  | Tuner |  | Smart |
|  | Tuning Up |  | Shift + Ch + |
|  | Tuning Down |  | Shift + Ch - |
|  | Preset Up |  | Ch + |
|  | Preset Down |  | Ch - |
|  | Memory |  | TV/R |
|  | Mono |  | Dual |
|  | Dimmer |  | 3D |
|  | Sleep |  | Sleep |
|  | Display |  | Info |
|  | Volume+ |  | Vol + |
|  | Volume- |  | Vol - |
|  | Mute |  | Mute |
|  | Option |  | Options |
|  | Up |  | Shift + Up |
|  | Down |  | Shift + Down |


 








 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------------|
|  | Right |  +  | Shift + Right |
|  | Left |  +  | Shift + Left |
|  | Enter |  +  | Shift + Ok |
|  | Folder Up |  | Right |
|  | Folder Down |  | Left |
|  | Repeat |  | Text |
|  | Shuffle |  | Subt |
|  | Pause |  | Pause |
|  | I<< |  | I<< |
|  | Stop |  | Stop |
|  | << |  | << |
|  | >> |  | >> |
|  | Play |  | Play |
|  | >>I |  | >>I |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|--------|
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Clear |  | Exit |
|  | Enter 3 |  | Pre Ch |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

