 
 





**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |                             |
|---|----------|---|-----------------------------|
|    | Sleep    |    | Sleep / Timer               |
|    | Receiver |    | Smart / List                |
|    | HDMI 1   |    | 1                           |
|    | HDMI 2   |    | 2                           |
|    | HDMI 3   |    | 3                           |
|    | HDMI 4   |    | 4                           |
|    | AV 1     |    | 5                           |
|    | AV 2     |    | 6                           |
|    | AV 3     |    | 7                           |
|    | AV 4     |    | 8                           |
|    | AV 5     |    | 9                           |
|  | Audio 1  |  | Guide / EPG / -/--          |
|  | Audio 2  |  | 0                           |
|  | V-AUX    |  | AV / Input / RDS            |
|  | Mode     |  | Picture / Format            |
|  | FM       |  | Blue / Prime Video / Random |
|  | AM       |  | Red / Netflix / Search      |

**Originalfernbedienung    Ersatzfernbedienung**

|   |             |   |                           |
|---|-------------|---|---------------------------|
|    | Preset Up   |    | >>  / Preset+             |
|    | Tuning Up   |    | >> / Tune+                |
|    | Info        |    | Info / Angle              |
|    | Memory      |    | Display / Media           |
|    | Preset Down |    | << / Preset-              |
|    | Tuning Down |    | << / Tune-                |
|    | Movie       |    | Subtitle / EQ             |
|    | Music       |    | Sound / Title             |
|    | Sur Decode  |    | D.Menu / Top              |
|    | Straight    |    | Text / Goto               |
|    | Enhancer    |    | Zoom / Size               |
|  | BD/DVD      |  | Green / APP / Repeat      |
|  | TV          |  | Fav / Marker / PC         |
|  | CD          |  | Yellow / YouTube / Repeat |
|  | Radio       |  | TV/Radio /                |
|  | Setup       |  | Setup / OPT /             |
|  | Up          |  | Up                        |





Originalfernbedienung   Ersatzfernbedienung

|  |        |   |                             |
|--|--------|---|-----------------------------|
|  | Option | + | Shift + Setup / OPT / Tools |
|  | Vol+   |   | Vol+                        |
|  | Left   |   | Left                        |
|  | Enter  |   | OK                          |
|  | Right  |   | Right                       |
|  | Vol-   |   | Vol-                        |
|  | Return |   | Back / Return               |
|  | Down   |   | Down                        |
|  | Mute   |   | Mute / Dimmer               |
|  |        |   |                             |
|  |        |   |                             |
|  |        |   |                             |
|  |        |   |                             |
|  |        |   |                             |
|  |        |   |                             |
|  |        |   |                             |
|  |        |   |                             |
|  |        |   |                             |

Originalfernbedienung   Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

