

 









 

 

 

 

 

 

 



 
 



 
 













Originalfernbedienung Ersatzfernbedienung

	Eject		Eject / Surround
	Power		Power
	Red/Program		Red / Netflix / Search
	Red/Program		TV/Radio /
	Green/Marker		Green / APP / Repeat
	Yellow/Digest		Yellow / YouTube / Repeat
	Blue/Zoom		Blue / Prime Video / Random
	Blue/Zoom		Zoom / Size
	1		1
	2		2
	3		3
	Status		Picture / Format
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Angle		Info / Angle
	Clear		Exit / Cancel / Clear
	0		0
	Search		Shift + Red / Netflix /
	Audio		Audio / Lang I/II
	PIP		Sleep / Timer
	Setup		Setup / OPT /
	Repeat		Shift + Green / APP /
	2nd Audio		Sound / Title
	Home		Smart / List
	Home		Shift + Menu /
	A/B		Shift + Yellow / YouTube /
	Top Menu		D.Menu / Top
	Pop-Up/Menu		Menu / Home
	Up		Up





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	On Screen		Display / Media
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<I / <II		Shift + << / Preset-
	I> / II>		Shift + >>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	<<I		CH- / Page-
	I>>		CH+ / Page+
	I<<		I<< / Preset-
	>>I		>>I / Preset+

