



| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|-----------------------------|
|  | Power |  | Power |
|  | Eco |  | Fav / Marker / PC |
|  | Net |  | Display / Media |
|  | Net Radio 1 |  | 1 |
|  | Net Radio 2 |  | 2 |
|  | Net Radio 3 |  | 3 |
|  | HDMI1 |  | 4 |
|  | HDMI2 |  | 5 |
|  | Bluetooth |  | Shift + 9 |
|  | HDMI3 |  | 7 |
|  | HDMI4 |  | 8 |
|  | Optical |  | 9 |
|  | TV |  | TV/Radio / |
|  | AUX1 |  | Guide / EPG / -/- |
|  | AUX2 |  | 0 |
|  | System Memory |  | Shift + 1 |
|  | System Memory |  | Shift + 2 |
|  | System Memory |  | Shift + 3 |
|  | Sub+ |  | CH+ / Page+ |
|  | Sub- |  | CH- / Page- |
|  | Dialog Lift |  | Smart / List |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | Mute |  | Mute / Dimmer |
|  | Setup |  | Setup / OPT / |
|  | Option |  | Shift + Setup / OPT / Tools |
|  | Return |  | Back / Return |
|  | Info |  | Info / Angle |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Movie |  | Red / Netflix / Search |



