





 













 







Originalfernbedienung Ersatzfernbedienung

	Snooze/Sleep		AV / Input / RDS
	Power		Power
	Alarm		Eject / Surround
	CD		3
	Bluetooth		9
	USB		8
	Radio		TV/Radio /
	AUX		7
	Option		Setup / OPT /
	Folder Up		Up
	+10		Guide / EPG / -/-
	I<<		Left
	Enter		OK
	>>I		Right
	Stop		Stop / Hold
	Folder Down		Down
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	Recall		Smart / List
	Volume+		Vol+
	Display		Display / Media
	X		Zoom / Size
	Volume-		Vol-
	Mute		Mute / Dimmer
	<< Tuning		<< / Tune-
	Tuning >>		>> / Tune+
	< Preset		I<< / Preset-
	Memory		Subtitle / EQ
	Preset >		>>I / Preset+

