




 
















 

 

 





 































Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	SLEEP		Sleep / Timer
	6 CH. INPUT		AV / Input / RDS
	DVD		Shift + 2
	D-TV / CBL		2
	VCR		4
	V-AUX		7
	CD		3
	TUNER		6
	MD / CD-R		9
	TUNER - PRESET-		CH- / Page-
	TUNER - PRESET+		CH+ / Page+
	TUNER - A		Red / Netflix / Search
	TUNER - B		Green / APP / Repeat
	TUNER - C		Yellow / YouTube / Repeat
	TUNER - D		Blue / Prime Video / Random
	TUNER - E		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	HALL		0
	JAZZ CLUB		1
	ROCK CONCERT		Sound / Title
	ENTERTAINMEN		Smart / List
	TV SPORTS		Shift + 1
	MONO / MOVIE		Picture / Format
	MOVIE THEATER -		5
	MOVIE THEATER -		8
	DOLBY / DST SUR.		Eject / Surround
	MATRIX 6.1		Guide / EPG / -/--
	SELECT		OK
	LEVEL		Display / Media
	UP		Up
	SET MENU		Menu / Home
	-		Left
	+		Right
	TEST		Text / Goto





Originalfernbedienung Ersatzfernbedienung

	DOWN		Down
	STEREO /		Audio / Lang I/II
	MUTE		Mute / Dimmer
	VOLUME+		Vol+
	VOLUME-		Vol-

Originalfernbedienung Ersatzfernbedienung

