



Originalfernbedienung Ersatzfernbedienung

	On/Off		Power
	Sleep		Sleep / Timer
	iPod		Fav / Marker / PC
	FM		6
	AUX		7
	< Preset		Left
	Preset >		Right
	<< Tuning		<< / Tune-
	Tuning >>		>> / Tune+
	Memory FM		Smart / List
	Clock/Set		D.Menu / Top
	Function		Setup / OPT /
	Menu		Menu / Home
	▲		CH+ / Page+
	I<<		I<< / Preset-
	Ok		OK
	>>I		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	▼		CH- / Page-
	DSP		AV / Input / RDS
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+

