



Originalfernbedienung Ersatzfernbedienung

	Standby		Shift + Power
	Power		Power
	Sleep		Sleep / Timer
	Phono		Fav / Marker / PC
	Tuner		6
	CD		3
	Multi CH In		Guide / EPG / -/--
	V-AUX		7
	CBL/SAT		0
	MD/TAPE		5
	CD-R		8
	DTV		1
	VCR 1		4
	DVR / VCR 2		9
	DVD		2
	Volume+		Vol+
	Volume-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Up / Preset/CH+		Up
	Menu		Menu / Home
	Pure Direct		Setup / OPT /
	Left / A/B/C/D/E-		Left
	Enter		OK
	Right /		Right
	Return		Back / Return
	Down / Preset/CH-		Down
	Display		Display / Media
	Straight Effect		TV/Radio /
	Classical		Sound / Title
	Live Club		Audio / Lang I/II
	Entertain		Zoom / Size
	Movie		Picture / Format
	Stereo		Subtitle / EQ
	Sur Decode		AV / Input / RDS





Originalfernbedienung Ersatzfernbedienung

	Select		Text / Goto
	Extd Sur.		Eject / Surround
	Night		Smart / List
	Freq/RDS		Play / Slow
	EON		Pause / Step / Freeze
	PTY Seek Mode		<< / Tune-
	PTY Seek Start		>> / Tune+

Originalfernbedienung Ersatzfernbedienung






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Preset Up		Up
	Preset Up		>>I / Preset+
	Left A/B/C/D/E		Left
	Enter		OK
	Right A/B/C/D/E		Right
	Preset Down		I<< / Preset-
	Preset Down		Down
	Display		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5

**Originalfernbedienung    Ersatzfernbedienung**

	6		6
	7		7
	8		8
	9		9
	0		0
	ENT		Fav / Marker / PC
	Freq/RDS		Play / Slow
	Eon		Pause / Step / Freeze
	Mode PTY Seek		<< / Tune-
	PTY Seek Start		>> / Tune+

