







 















Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Movie		Red / Netflix / Search
	Music		Green / APP / Repeat
	Sports		Yellow / YouTube / Repeat
	Game		Blue / Prime Video / Random
	Input 1		1
	Input 2		2
	Input 3		3
	Volume+		Vol+
	Input 4		4
	FM		5
	Dock		6
	Volume-		Vol-
	Stereo		Sound / Title
	Up/+		Up
	Mute		Mute / Dimmer
	Left/A<E		Left

Originalfernbedienung Ersatzfernbedienung

	Enter		OK
	Right/A>E		Right
	Down/-		Down
	Preset/Tune		D.Menu / Top
	Auto/Man'L		Subtitle / EQ
	Memory		Rec / Rec Mode
	SW+		7
	Test		Text / Goto
	Position		Setup / OPT /
	Area		TV/Radio /
	SW-		Guide / EPG / -/-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Center+		8
	<<		<< / Tune-
	>>		>> / Tune+





Originalfernbedienung Ersatzfernbedienung

	Dock Mode		AV / Input / RDS
	Center-		0
	Bluetooth On		Picture / Format
	Bluetooth Off		Zoom / Size
	Audio Delay		Audio / Lang I/II
	SUR. +		9
	Enhancer		Smart / List
	Night		Sleep / Timer
	Disp.Mode		Info / Angle
	SUR. -		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

