

 
 








 





 

 


 
 
 


 
 

 
 




 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv/Radio		TV/R
	0		0
	←PR		Back
	EPG		Guide
	Up		Up
	PR+		Ch +

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Left		Left
	Vol-		Vol -
	OK/List		Ok
	Right		Right
	Vol+		Vol +
	FAV		Pre Ch
	PR-		Ch -
	Down		Down
	Exit		Exit
	Red/Find		Red
	↑/Page+		3D
	Green/Zoom		Green
	↓/Page-		Format
	Yellow		Yellow
	Text		Text
	Pause		Pause



