












































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	Nicam / A2		Shift + Audio / Lang I/II
	Aspect		Zoom / Size
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	--/		Shift + Guide / EPG / --/
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	FAV		Fav / Marker / PC
	Freeze		Shift + Pause / Step /
	TV / Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Up		Up
	EPG		Guide / EPG / --/
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Display		Info / Angle
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	Play/Pause / Hold		Play / Slow
	Play/Pause / Hold	+	Shift + Stop /
	Play/Pause / Hold		Pause / Step / Freeze
	<< / Reveal		<< / Tune-
	>> / Size		>> / Tune+
	Stop / Index		Stop / Hold
	I<<		I<< / Preset-
	>>I / S.Page		>>I / Preset+
	TTX		Text / Goto
	T.Shift		Setup / OPT /
	Audio		Audio / Lang I/II



































Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	Rec / Auto		Rec / Rec Mode
	PVR		Smart / List


 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	Nicam / A2		Shift + Audio / Lang I/II
	Aspect		Shift + Picture / Format
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	--/--		Shift + Guide / EPG / --/--
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	FAV		Fav / Marker / PC
	Freeze		Shift + Pause / Step /
	TV / Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Up		Up
	EPG		Guide / EPG / --/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Display / i		Display / Media
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	Play/Pause / Hold		Play / Slow
	Play/Pause / Hold		Shift +
	Play/Pause / Hold		Stop /
	Play/Pause / Hold		Pause / Step / Freeze
	<< / Reveal		<< / Tune-
	>> / Size		>> / Tune+
	Stop / Index		Stop / Hold
	I<<		I<< / Preset-
	>>I / S.Page		>>I / Preset+
	TTX		Text / Goto
	T.Shift		D.Menu / Top
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	Rec / Auto		Rec / Rec Mode
	PVR		Smart / List

