 

 



 
 


 



 
 
 


 

 


 
 

 


 



 
 
 
 
 
 


 
 











 
 
 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	I/II/Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Info		Info
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Jump		Media
	FAV.CH		Pre Ch
	OK		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	PR-		Ch -
	PR+		Ch +
	Red/D.Setup		Red
	Green/Repeat		Green
	Yellow/Zoom		Yellow
	Blue/Goto		Blue
	[≡+]/DTV/Radio		TV/R





Originalfernbedienung    Ersatzfernbedienung

	[≡◆]/USB/SD		Options
	[≡?]/Timeshift		Pause
	[≡i]/PVR List		3D
	Rec		Rec
	Stop		Stop
	Play/Pause		Play
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	DVD Menu		D. Menu
	Text		Text
	Subtitle		Subt
	Guide		Guide
	Eject		Eject
	P.Mode	+	Shift + Format
	S.Mode	+	Shift + Dual

Originalfernbedienung    Ersatzfernbedienung

	P.Size		Format

