 



 

 


 
 

 

 

 



 



 

 

 



 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Nicam/A2 |  | Shift + Audio / Lang I/II |
|  | Aspect |  | Shift + Picture / Format |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | -/-- |  | Shift + Guide / EPG / -/-- |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------------|
|  | Recall |  | Back / Return |
|  | Display |  | Display / Media |
|  | Freeze |  | Pause / Step / Freeze |
|  | Rec/Auto |  | Rec / Rec Mode |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Sleep |  | Sleep / Timer |
|  | Up |  | Up |
|  | Source |  | AV / Input / RDS |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Menu |  | Menu / Home |
|  | Exit |  | Exit / Cancel / Clear |



