


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Dual
	Game		Smart
	Tv/Radio		TV/R
	FAV		Shift + Pre Ch
	Recall		Pre Ch

**Originalfernbedienung Ersatzfernbedienung**

	Dev.List		Media
	EPG		Guide
	Subtitle		Subt
	Text		Text
	Auto		Options
	Menu		Menu
	Zoom		Eject
	Info		Info
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +



