


 

 

 

 







 

 

 

 


 
 
 









**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Display		Info
	P.Mode		Shift + Format
	S.Mode		Shift + Dual

**Originalfernbedienung    Ersatzfernbedienung**

	Sleep		Sleep
	EPG		Guide
	FAV		Pre Ch
	FAV-		Shift + Ch -
	FAV+		Shift + Ch +
	Aspect		3D
	Input		AV
	Nicam		Smart
	LCD Menu		Menu
	Exit		Exit
	Eject		Eject
	DVD Setup		D. Menu
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right



