 

 

 
 
 
 
 
 

 
 



 
 
 
 
 
 
 
 
 
 


 
 
 
 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|------------|
|  | Power |  | Power |
|  | Open/Close |  | Eject |
|  | Subtitle |  | Subt |
|  | Angle/Del |  | Exit |
|  | Language |  | Dual |
|  | Return |  | Back |
|  | Time |  | Shift + AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0/10 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------|
|  | +10 |  | Pre Ch |
|  | Mute |  | Mute |
|  | N/P |  | Format |
|  | PBC |  | 3D |
|  | OSD |  | Smart |
|  | Setup |  | Options |
|  | Title/TTX |  | Text |
|  | Menu |  | Menu |
|  | Prog/EPG |  | Guide |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Play |  | Play |
|  | Stop |  | Stop |
|  | Pause |  | Pause |



