

 





 



 

 



 

 







 

 







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	Tv-Mode		Picture / Format
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	10+		Guide / EPG / -/--
	Dvd/Usb		AV / Input / RDS
	Display		Display / Media
	PBC		Fav / Marker / PC

**Originalfernbedienung Ersatzfernbedienung**

	Return		Back / Return
	Setup		Setup / OPT /
	Up		Up
	Title		Sound / Title
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Audio		Audio / Lang I/II
	N/P		Smart / List
	Zoom		Zoom / Size
	Step		Shift + Pause / Step /
	Vol+		Vol+
	Vol-		Vol-
	I<<		I<< / Preset-
	>>I		>>I / Preset+





Originalfernbedienung Ersatzfernbedienung

	Slow	+	Shift + Play /
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Resume		Sleep / Timer
	Goto		Text / Goto
	Mute		Mute / Dimmer
	Shuffle		Blue / Prime Video / Random
	Prog		TV/Radio /
	Clear		Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Repeat		Green / APP / Repeat
	A-B RPT		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung