 



 

 

 

 

 

 

 





















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Lang		Audio / Lang I/II
	4		4
	5		5
	6		6
	Game		Picture / Format
	7		7
	8		8
	9		9
	Tv/Radio		TV/Radio /
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return






 










 

 



 




 
Originalfernbedienung Ersatzfernbedienung

	Dev.List		Display / Media
	EPG		Guide / EPG / -/-
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Auto		Setup / OPT /
	Menu		Menu / Home
	Zoom		Zoom / Size
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	Enter		OK
	Right		Right
	Vol+		Vol+
	CH-		CH- / Page-





**Originalfernbedienung** **Ersatzfernbedienung**

	Down		Down
	Filelist		Smart / List
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Red/FAV./Daily		Red / Netflix / Search
	Green/Del./Weekl		Green / APP / Repeat
	Yellow/Move/P.Info		Yellow / YouTube / Repeat
	Blue/Look/Timer		Blue / Prime Video / Random

**Originalfernbedienung** **Ersatzfernbedienung**