 




 
 
 
 

 

 
 

 


 
 
 
 
 
 
 
 
 





 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	USB		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Pg Dn		Shift + Ch -
	Pg Up		Shift + Ch +
	>>		>>
	<<		<<
	>>		>>




Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	Play		Play
	Pause		Pause
	Stop		Stop
	Audio		Dual
	Repeat	+	Shift + Text
	EPG		Guide
	TV / Radio		TV/R
	Sleep		Sleep
	Red / Zoom		Red
	Red / Zoom		Eject
	Green / Aspect		Green
	Green / Aspect	+	Shift + Format
	Yellow / V-Format		Yellow
	Yellow / V-Format		Format
	Blue / Timer		Blue
	Blue / Timer		Options

Originalfernbedienung Ersatzfernbedienung

