














 

















































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Sub		Subtitle / EQ
	TXT		Text / Goto
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	i		Info / Angle
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Vol-		Vol-
	Fav		Fav / Marker / PC
	List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

0	0	HDMI - BAT 0	0

Originalfernbedienung Ersatzfernbedienung

