

SAKKYO  
DVD/HDD  
DVD 1700

Mandis Shop S.L.  
Sant Cugat del Vallès - Barcelona  
info@mandis.es

Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
	POWER		P/Ch +	SKIP NEXT	
MUTE	MUTE	EJECT	P/Ch -	SKIP PREV.	
1 ..?	1		VOL +	VOLUME+	
2 ABC	2		VOL -	VOLUME-	
3 DEF	3			UP	
4 GHI	4			DOWN	
5 JKL	5		OK	ENTER	
6 MNO	6			LEFT	
7 PQRS	7			RIGHT	
8 TUV	8		MENU	MENU	
9 WXYZ	9		EXIT RETURN	RETURN	
0/10	0 / 10		TOP MENU	SETUP	LANGUAGE
1.  GUIDE	10+		PICT TITLE	TITLE	V-MODE
2.  FAV	CLEAR		EPG	SEARCH	RESUME
AUTO/TRK	REMAIN			SLOW	
SUBT	SUBTITLE	N / P		STOP	
AV Dvd/Tv	DVD / USB			ZOOM	
	OSD			RAN.	
TEXT	REPEAT	L / R	RED	ANGLE	
TV	A-B		GREEN	REV.	
BACK	PROG.		YELLOW	PLAY / PAUSE	
			BLUE	FWD	