

SAMSUNG
TV
10129C

MANDIS SHOP S.L.
SANT CUGAT DEL VALLES
info@mandis.es



Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
POWER	Power		V	Down	
MUTE	Mute		EXIT		
1	1		BACK		
2	2		VOL+	Vol+	
3	3		VOL-	Vol-	
4	4		INFO	[=]/Display	
5	5		FAV(1ST)	[=O]/P.STD	
6	6		CH+	CH/P+	
7	7		CH-	CH/P-	
8	8		TEXT	TTX/MIX	
9	9		<P>		
0	0		...		
VOD	[=..]/Video		TV/RADIO	TV	
MENU	Menu		OPT-		
>PLAY			SOURCE		
PAUSE			V-FORMAT	[=♦]/P.Size/[<>]	
STOP			WIDE		
RECORD					
<<					
>>					
<<					
>>					
RED	Red				
GREEN	Green				
YELLOW	Yellow				
BLUE	Blue				
MEDIA	[=♦]/Sleep/Timer				
EPG(GUIDE)	[=+]/-/--				
OK	OK				
^	Up				
<	Left				
>	Right				