



| Original | Replacement | Original | Replacement |
|---|---|--|---|
|  Power |  Power |  Info |  Info / Angle |
|  Mute |  Mute / Dimmer |  [I]/Menu |  Menu / Home |
|  Red |  Red / Netflix / Search |  Up |  Up |
|  Green |  Green / APP / Repeat |  Source |  AV / Input / RDS |
|  Yellow |  Yellow / YouTube / Repeat |  Left |  Left |
|  Blue |  Blue / Prime Video / Random |  OK |  OK |
|  << / [≡o] |  << / Tune- |  Right |  Right |
|  >> / [≡?] |  >> / Tune+ |  Down |  Down |
|  I<< / [≡+] |  I<< / Preset- |  EPG |  Guide / EPG / -/- |
|  >>I / [≡..] |  >>I / Preset+ |  Exit |  Exit / Cancel / Clear |
|  Play |  Play / Slow |  Vol+ |  Vol+ |
|  Pause |  Pause / Step / Freeze |  FAV |  Fav / Marker / PC |
|  Stop |  Stop / Hold |  CH+ |  CH+ / Page+ |
|  [≡i] |  Smart / List |  Vol- |  Vol- |
|  Text |  Text / Goto |  REP/Rec |  Rec / Rec Mode |
|  Subtitle |  Subtitle / EQ |  CH- |  CH- / Page- |
|  Freeze |  Shift + Pause / Step / Freeze |  1 |  1 |

































| Original | Replacement | Original | Replacement |
|-----------|---|----------|-------------|
| Power |  Power | | |
| Mute |  Mute / Dimmer | | |
| Play |  Play / Slow | | |
| Pause |  Pause / Step / Freeze | | |
| Stop |  Stop / Hold | | |
| Rec |  Rec / Rec Mode | | |
| <</Hold |  << / Tune- | | |
| >>/Index |  >> / Tune+ | | |
| I<< |  I<< / Preset- | | |
| >>I |  >>I / Preset+ | | |
| Nicam/A2 |  Audio / Lang I/II | | |
| Subtitle |  Subtitle / EQ | | |
| Subpage |  Eject / Surround | | |
| Size |  Zoom / Size | | |
| Sleep |  Sleep / Timer | | |
| DTV/Radio |  TV/Radio / | | |
| Reveal |  D.Menu / Top | | |

| Original | Replacement | Original | Replacement |
|----------|---|----------|-------------|
| TXT/MIX |  Text / Goto | | |
| Menu |  Menu / Home | | |
| Up |  Up | | |
| Info |  Info / Angle | | |
| Left |  Left | | |
| Enter |  OK | | |
| Right |  Right | | |
| Cancel |  Exit / Cancel / Clear | | |
| Down |  Down | | |
| Back |  Back / Return | | |
| Vol+ |  Vol+ | | |
| List |  Smart / List | | |
| CH+ |  CH+ / Page+ | | |
| Vol- |  Vol- | | |
| Mode |  Display / Media | | |
| CH- |  CH- / Page- | | |
| 1 |  1 | | |





| Original | Replacement | Original | Replacement |
|------------|---|----------|---|
| Power |  Power | Up |  Up |
| Mute |  Mute / Dimmer | Info |  Info / Angle |
| Play |  Play / Slow | Left |  Left |
| Pause |  Pause / Step / Freeze | Ok |  OK |
| Stop |  Stop / Hold | Right |  Right |
| Rec |  Rec / Rec Mode | Exit |  Exit / Cancel / Clear |
| <</[Timer] |  << / Tune- | Down |  Down |
| >>/[≡?] |  >> / Tune+ | Recall |  Back / Return |
| I<</[≡⇅] |  I<< / Preset- | Vol+ |  Vol+ |
| >>I/[≡...] |  >>I / Preset+ | [≡i] |  Smart / List |
| Audio |  Audio / Lang I/II | Ch+ |  CH+ / Page+ |
| Subtitle |  Subtitle / EQ | Vol- |  Vol- |
| I<</[≡⇅] |  Zoom / Size | Ch- |  CH- / Page- |
| <</[Timer] |  Sleep / Timer | 1 |  1 |
| Text |  Text / Goto | 2 |  2 |
| Source/Av |  AV / Input / RDS | 3 |  3 |
| [II] |  Menu / Home | 4 |  4 |

| Original | Replacement | Original | Replacement |
|------------|---|----------|---|
| Power |  Power | Up |  Up |
| Mute |  Mute / Dimmer | Info |  Info / Angle |
| Play |  Play / Slow | Left |  Left |
| Pause |  Pause / Step / Freeze | Ok |  OK |
| Stop |  Stop / Hold | Right |  Right |
| Rec |  Rec / Rec Mode | Exit |  Exit / Cancel / Clear |
| <</[Timer] |  << / Tune- | Down |  Down |
| >>/[≡?] |  >> / Tune+ | Recall |  Back / Return |
| I<</[≡⇅] |  I<< / Preset- | Vol+ |  Vol+ |
| >>I/[≡...] |  >>I / Preset+ | [≡i] |  Smart / List |
| Audio |  Audio / Lang I/II | Ch+ |  CH+ / Page+ |
| Subtitle |  Subtitle / EQ | Vol- |  Vol- |
| I<</[≡⇅] |  Zoom / Size | Ch- |  CH- / Page- |
| <</[Timer] |  Sleep / Timer | 1 |  1 |
| Text |  Text / Goto | 2 |  2 |
| Source/Av |  AV / Input / RDS | 3 |  3 |
| [II] |  Menu / Home | 4 |  4 |



