







 

 

 





 







 





 













 

 

 



Original	Replacement
 Power	 Power
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 P<P	 Smart / List
 Up	 Up
 Left	 Left
 Ok	 OK
 Right	 Right
 Down	 Down
 AV	 AV / Input / RDS
 Tv/R	 TV/Radio /
 Info	 Info / Angle
 I-II	 Audio / Lang I/II
 Vol+	 Vol+

Original	Replacement
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PP	 Back / Return
 0	 0
 Exit	 Exit / Cancel / Clear
 Exit	 Shift + Guide / EPG / -/-





Original	Replacement	Original	Replacement
 [=]/Text	 GOTO TEXT Text / Goto		
 [=o]	 TUNE- << / Tune-		
 [=+]	 TUNE+ >> / Tune+		
 [=x]	 PRESET-  << / Preset-		
 [=.] [=*]	 PRESET+ >>  / Preset+		
 [=♦] [=+]/Wide	 FORMAT PICTURE Picture / Format		
 [=?] / PC	 PC FAV MARKER Fav / Marker / PC		
 [=i] / Guide	 GUIDE EPG Guide / EPG / -/-		

