













 



 

 

 















| Original | Replacement |
|---|---|
|  Power |  Power |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  PRE-CH |  Fav / Marker / PC |
|  TTX/MIX |  Text / Goto |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  Mute |  Mute / Dimmer |

| Original | Replacement |
|---|--|
|  PR+ |  CH+ / Page+ |
|  PR- |  CH- / Page- |
|  CH.List |  Shift + Smart / List |
|  Menu |  Menu / Home |
|  Smart Hub |  Smart / List |
|  Guide |  Guide / EPG / -/- |
|  Tools |  Setup / OPT / |
|  Info |  Info / Angle |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Return |  Back / Return |
|  Left |  Left |
|  Enter |  OK |
|  Exit |  Exit / Cancel / Clear |
|  Red/A |  Red / Netflix / Search |
|  Green/B |  Green / APP / Repeat |





| Original | Replacement |
|----------|------------------------------|
| | Yellow / YouTube / Repeat |
| | Blue / Prime Video / Random |
| | E-Manual / D.Menu / Top |
| | Stop / Hold |
| | Rec / Rec Mode |
| | << / Tune- |
| | AD/Subt. / Subtitle / EQ |
| | AD/Subt. / Audio / Lang I/II |
| | Play / Slow |
| | Pause / Step / Freeze |
| | >> / Tune+ |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

