



Original	Replacement
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TTX/MIX
	0
	PRE-CH
	Vol+
	Mute
	P+

Original	Replacement
	Vol-
	CH List
	CH List
	P-
	Menu
	Smart Hub
	Guide
	Tools
	Up
	Info
	Left
	Enter
	Right
	Return
	Down
	Exit
	Red/A





	Original	Replacement	Original	Replacement
		Green / APP / Repeat		
		Yellow / YouTube / Repeat		
		Blue / Prime Video / Random		
		D.Menu / Top		
		TV/Radio /		
		Subtitle / EQ		
		Audio / Lang I/II		
		Stop / Hold		
		<< / Tune-		
		I<< / Preset-		
		Play / Slow		
		Pause / Step / Freeze		
		>> / Tune+		
		>>I / Preset+		

