



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
Audio	Audio / Lang I/II
FAV+	Shift + CH+ /
FAV	Fav / Marker / PC

Original	Replacement
FAV-	Shift + CH- /
CH+	CH+ / Page+
P.Mode	Picture / Format
Vol+	Vol+
CH-	CH- / Page-
S.Mode	Sound / Title
Vol-	Vol-
Source	AV / Input / RDS
Sleep	Sleep / Timer
Aspect	Shift + Picture / Format
Info	Info / Angle
Up	Up
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down





Original	Replacement	Original	Replacement
Exit	Exit / Cancel / Clear		Green / APP / Repeat
Text	Text / Goto		Yellow / YouTube / Repeat
Index	Display / Media		Blue / Prime Video / Random
Play/Mix	Play / Slow		
Pause	Pause / Step / Freeze		
Stop/Reveal	Stop / Hold		
<</Hold	<< / Tune-		
<</Hold	Shift + Stop /		
>>/Subpage	>> / Tune+		
Size	Zoom / Size		
I<<	I<< / Preset-		
>>I/Cancel	>>I / Preset+		
T-Shift	Smart / List		
Tv/Radio	TV/Radio /		
Rec	Rec / Rec Mode		
EPG	Guide / EPG / -/--		
Red	Red / Netflix / Search		

